


# AnchorPad®

a Business Machine Security Company


Anchorpad a BMS Company 520 West Central Avenue Brea, CA. 92821

Toll-Free: 800.626.2467 | Fax: 714.990.5409 [www.anchorpad.com](http://www.anchorpad.com)


## Single Plate Installation Instructions

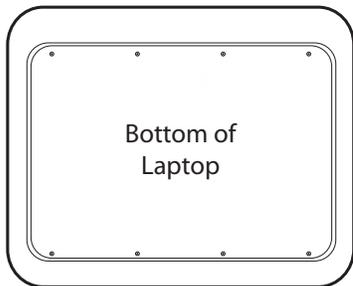


**STEP 1:**  
Carefully turnover laptop or other device and locate best position where lock block won't interfere with cables.

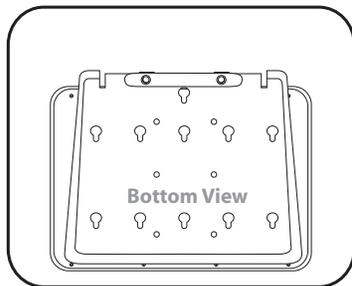


**STEP 2:**  
No matter final position, make sure device is almost flush to lock block. About 1/8" between device and block.

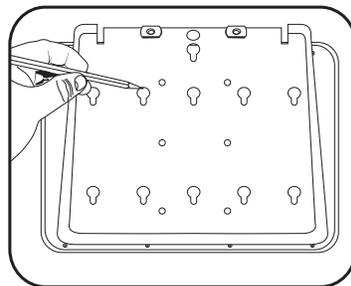


**STEP 3:**  
Once in position hold the base plate in place firmly and mark the four best positioned keyholes with a pencil.

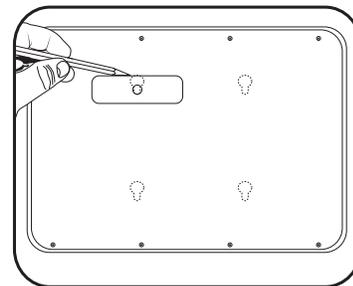


**STEP 4:**  
Use the template to mark the perfect placement of 4 flex pads. Make marks dark enough to be seen.

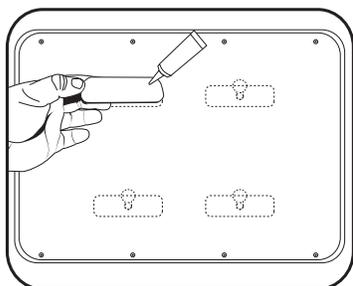


**STEP 5:**  
Clean off any debris from Flex Pads with alcohol pad. Place small amounts of glue on each pad and stick to marked circles

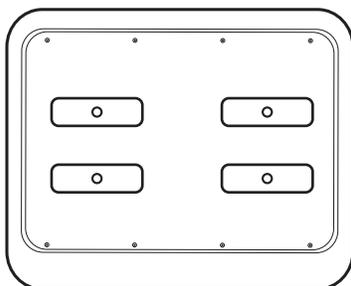


**STEP 6:**  
Once glued place small amount of even pressure for one full minute (Allow 1/2 hour to cure). Insert screws into the flex pads.

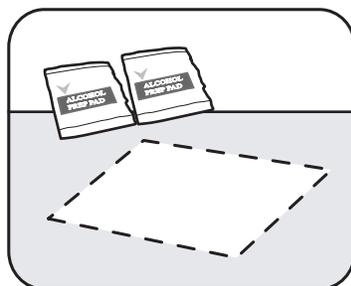


**STEP 7:**  
With Alcohol pads, provided clean the surface where Single Plate will be positioned.

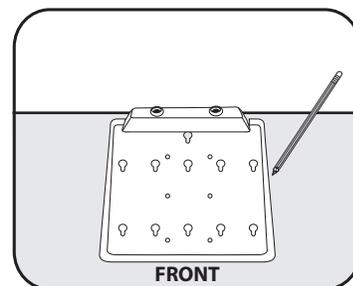


**STEP 8:**  
Place 1110 Plate in final placement position. Mark position with a pencil to use as installation guides.

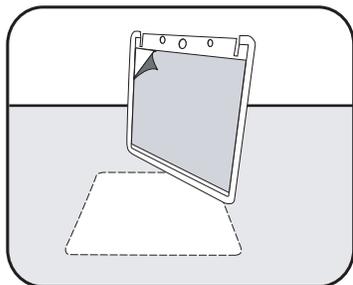


**STEP 9:**  
Once marked, remove Plate and remove protective liner from adhesive tape on bottom.

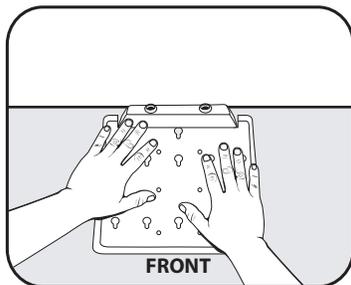


**STEP 10:**  
With Lock Block still attached, press firmly down against the plate and slide hands around to remove any air pockets from bottom of plate.

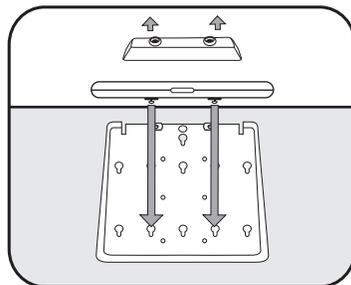

**STEP 11:**  
Remove Lock Block, lower the device down to base plate guide the screws into larger end of keyhole and slide towards small end.

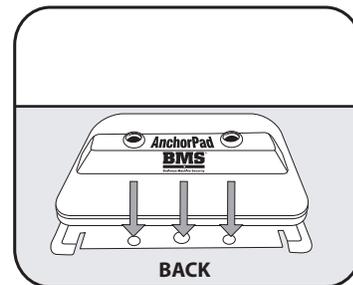

**STEP 12:**  
Replace Lock Block, lowering Lock Block into position making sure computer fits snugly.

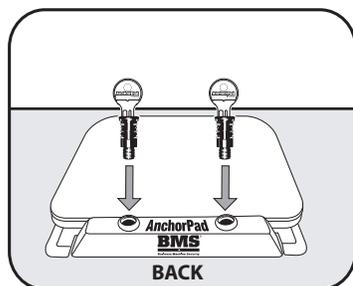

**STEP 13:**  
Insert both locks into the Lock Block. Use keys to turn locks clockwise until fully threaded into pennuts on the Base Plate. **(Do Not Overtighten)** Remove keys. Installation is now complete and ready to use.

### Notes Before Beginning Installation:

1. To familiarize yourself with the entire installation process, please take a moment to read through all of the installation steps.
2. Disconnect all cables from the back of the laptop computer and clear the work surface around the desk.
3. Please allow 24 hours for complete curing of adhesive.

### Tools and Components included in your package:



Record key code for future reference and store keys in a safe place. Questions? Please call Technical Assistance 800.626.2467